

Quick Reference Guide

Mitel 5212

MITEL

5212 IP Phone



NN0191

Mitel 5212 IP Phone

- 1 Display
- 2 Ring/Message Indicator
- 3 Volume, Speaker, and Mute Controls
- 4 Fixed-Function Keys
- 5 Key Pad
- 6 Personal Keys
- 7 Speaker
- 8 Handset

Fixed-Function Keys

- SPEAKER
- MUTE
- SUPERKEY
- CANCEL
- REDIAL
- HOLD
- TRANSFER / CONFERENCE
- MESSAGE



it's about YOU

M Mitel (design) is a registered trademark of Mitel Networks Corporation. © 2005, Mitel Networks Corporation. All other products and services are the trademarks of their respective holders. All rights reserved.

Note: For more information about using Mute or other features, or about programming Personal Keys on your 5212 IP Phone, refer to the *5212/5224 IP Phone User Guide* located at www.mitel.com, or contact your Administrator.

Make a Call

- 8 Lift the handset, or
- 3 Press .
- 5 Dial the number, or
- 6 Press a **Speed Call** key, or
- 4 Press , or
- 5 Dial the prefix for external calls (e.g. 9) and the number.

Answer a Call

- 8 Lift the handset, or
- 3 Press and begin speaking.

End a Call

- 4 Press , or
- 8 Replace the handset.

Place a Call on Hold

- 4 Press .
The line key flashes.
- 8 Replace the handset if necessary.

Retrieve a Call from Hold

- 8 Lift the handset, or
- 3 Press .
- 6 Press the flashing line key.

Retrieve a Message

- 4 Press . It flashes when a message is waiting.
Follow the voice mail prompts to retrieve your message.

Transfer a Call

- 4 Press .
- 5 Dial the number. Wait for an answer.
- 8 Hang up, or announce the transfer and then hang up.

Conference a Call

- 4 Press .
- 5 Dial the number. Wait for an answer.
- 4 Press .

Program a Speed Call

- 4 Press .
- 5 Press # until **Personal Keys?** appears.
- 5 Press *.
- 6 Press a **Personal Key**.
- 5 Press *.
- 5 Dial the number, or
- 4 Press (to redial the last number).
- 6 Press the **Personal Key** again.
- 5 Press * to make the number private, or
- 5 Press # to keep the number visible.
- 4 Press .

Adjust Volume Levels

Adjust ringer volume while the phone is ringing. Adjust speaker volume while using the handset or speaker.

- 3 Press repeatedly to raise the volume, or repeatedly to lower the volume.
- 3 Press to mute the microphone. Refer to the *5212/5224 IP Phone User Guide*.