

Troubleshoot Media Express in ConCap Studio123 (LIB123)

Article Number: 469 | Last Updated: Mon, Mar 19, 2018 at 3:05 PM

No video:

- Ensure Camera is turned on
- Ensure Lens Cap is open and there is nothing obstructing the lens
- Ensure there is enough light in the room

No audio:

- Ensure Camera controls are set to:
 - INPUT 1 = MIC +48v, INPUT 2 = MIC
 - CH1 = A, CH2 = A
 - ON
 - Dials = 50%

Posted by: Joel Thiessen - Wed, May 11, 2016 at 3:29 PM. This article has been viewed 1856 times.

Online URL: <https://knowit.ok.ubc.ca/article/troubleshoot-media-express-in-concap-studio123-lib123-469.html>